

instant.strong.secure.

thinking inside and outside the box

LOCK IT UP!

Our INSTA Bolt-On Lock Box allows you to add a lock box to your container easily for added security. The bolt-on lock box protects a padlock from being accessible to bolt cutters.

• Re-usable

- Fast
- Strong
- Enhance safety
- Lifetime warranty
- Specially integrated "Wave" design.
- Designed for bolt-on or weld-in application
- Perfect fit with our 8080
 INSTA Sobo Block Lock
 or new 6850 INSTA Pad
 Lock Pro Series
- Available in both, right and left-hand models

INSTA BOLT-ON LOCK BOX

www.instacm.com 1.866.647.4353



INSTA Container Modifications is a proud charter member of the National Portable Storage Association (NPSA).

INSTA BOLT-ON LOCK BOX (3240, 3241) INSTA BOLT-ON PUCK LOCK BOX (3233)

Installation Guide



Tools Required For Installation

- PPE Eye protection, gloves, hearing protection
- Marking tool
- Extension cord
- Drill
- Small drill bit for pilot holes
- Stepped drill bit to 5/8"
- ³/₄" Ratchet socket or wrench
- Metal punch
- Hammer



(1)

- 1. Ensure all PPE (Personal Protective Equipment) is worn.
- 2. Center the drill template provided over the closed container door at your desired height.
- Mark the two holes on one side only. Right side for #3240 INSTA Lock Box and #3233 INSTA Lock Box. Left side holes for #3241 INSTA Lock Box (left hand) only.



- 2
- 1. Tap the two marks with a metal punch.
- 2. Drill the two pilot holes with a starter drill bit and continue drilling straight through the container door.
- 3. Finish drilling out the two holes with a stepped drill bit to 5/8".



instant.strong.secure.

thinking inside and outside the box

LOCK IT UP!

Our INSTA Bolt-On Lock Box allows you to add a lock box to your container easily for added security. The bolt-on lock box protects a padlock from being accessible to bolt cutters.



- 3
- 1. Place bolts into front section of the lock box.
- 2. Bolt to the container door using a ³/₄" socket driver or ratchet.



<mark>4</mark>)

- 1. With the back section held against the front close the container door.
- 2. Line up the back section to ensure the container doors will open and close without binding.
- 3. Once positioned, mark the outline of the back section.



5

- 1. With the front door open replace the back section within the outline.
- 2. Mark the center of the two holes.
- 3. Repeat steps two-three to install the back section.



6

1. To install **#3233 INSTA Bolt-On Puck Lock**, repeat steps one through five.


INSTA BOLT-ON LOCK BOX

www.instacm.com 1.866.647.4353



INSTA Container Modifications is a proud charter member of the National Portable Storage Association (NPSA).

WARNING - All products that require installation or fabrication should never be done until you have the product in hand to take exact measurements. While every attempt is made to make sure product specifications are accurate, there is the possibility the products have been updated or a small variance between production made the measurement off from what's in this book. Installation of products may require some fabrication experience, and in no way does warranty cover installation mistakes.

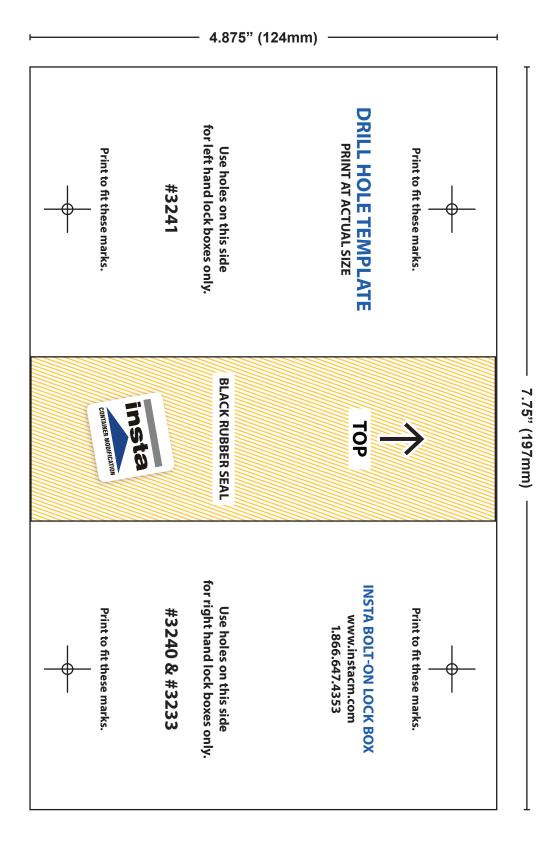

IMPORTANT:

To ensure accurate sizing and positioning of drill holes, select **"ACTUAL SIZE"** in printer settings when printing this document.