



instant.strong.secure.

thinking inside and outside the box

ADD A WINDOW!

Our INSTA Window is tough and stylish. Built with heavy-duty one piece integrated steel frame construction, this window looks as good as it is strong.

- Large 3'x4' (0.91 m x 1.22 m) superior quality dual pane PVC window.
- Heavy-duty one piece integrated steel frame construction.
- Sliding bug screen.
- Designed for bolt-on or weld-on application.
- Drip plate included.
- Security screen available.

INSTA WINDOW

www.instacm.com

1.866.647.4353



INSTA Container Modifications is a proud charter member of the National Portable Storage Association (NPSA).

#6066 3'X4' INSTA WINDOW

Installation Guide



Tools Required For Installation

- PPE – Eye protection, gloves, hearing protection, and ensure not to wear loose fitting clothing
- Step ladder
- Measuring tape
- Marking tool
- Extension cord
- Plasma cutter or angle grinder
- Drill
- Self-Tapping screws
- Driver bit for screws
- Sealant



1

1. Ensure all PPE (Personal Protective Equipment) is worn.
2. Start your measurement at the junction of the container wall and upper frame.
3. Make a mark at 13 inches (33 cm). Continue on the same line, make another mark at 37 inches (94 cm).
4. Measure over from those two marks the width of the **inside** window frame.
5. Center equally on the two outer corrugations.
6. Connect the four points using a straight edge.

****Installation measurements provided for the #6066 3'X4' INSTA Window are for use on standard height containers only!****



2

1. Using a metal cutting tool carefully cut along the lines and remove.



3

1. Test fit the window in the container.



instant.strong.secure.

thinking inside and outside the box

ADD A WINDOW!

Our INSTA Window is tough and stylish. Built with heavy-duty one piece integrated steel frame construction, this window looks as good as it is strong.

INSTA WINDOW

www.instacm.com

1.866.647.4353



INSTA Container Modifications is a proud charter member of the National Portable Storage Association (NPSA).




4

1. Apply sealant to the vertical edges of the opening.
2. Re-install the window and secure with self-tapping screws along the **side and bottom** edges only.



5

1. Test fit the drip plate over the top frame of the window for a tight fit.
2. Apply a bead of sealant from the top of the container wall to the top of the window.
3. Using the same self-tapping screws secure the drip plate to the container.

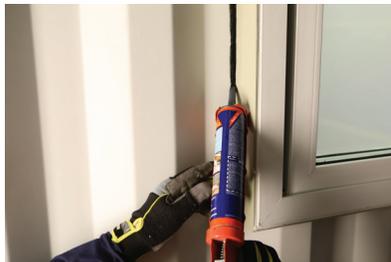

6

1. Apply a bead of sealant around the entire perimeter of the window frame and drip plate.
2. From inside the container, complete the installation by applying a bead of sealant along the inside edges of the opening and window frame.

WARNING - All products that require installation or fabrication should never be done until you have the product in hand to take exact measurements. While every attempt is made to make sure product specifications are accurate, there is the possibility the products have been updated or a small variance between production made the measurement off from what's in this book. Installation of products may require some fabrication experience, and in no way does warranty cover installation mistakes.